

Soil Compactors



Operator Efficiency Tips

- Park on a level surface. If necessary park on a grade to block the machine.
- Be careful to avoid conditions, which could lead to tipping when working on hills, banks or slopes and when crossing ditches, ridges or other obstructions.
- Carry attachments close to the ground, approximately 40 cm (15 in.) above ground level.
- Be sure hitch points and the towing device is adequate.
- Connect trailing equipment to a drawbar or hitch only.
- Know the maximum height of your machine.
- Shut the vibratory system off when passing over concrete or hard pavement.
- Must turn off vibrator first before making a directional change.
- Know the width of your attachments so proper clearance can be maintained when operating near fences, boundary obstacles.
- Operate the controls only with the engine running.
- Always travel at slow speed when compacting.
- Attain desired travel speed before engaging the vibratory system.



- Avoid using the leveling blade (if equipped) as plow or digging device, as machine damage may occur.
- Work up and down slopes, rather than sideways, whenever possible for safety and best compaction. Operating sideways on the slope can result in skidding and difficulty in maintaining good directional control.
- Begin the first compaction pass along the side of the work with subsequent passes gradually working towards the centre. Overlaps the previous pass by approximately 200 mm (8 in.) to eliminate uncompacted strips.

Please read the machine Operation and Maintenance Manual for complete operating instructions.

AUSTRALIA

1800 CAT RENT
1800 228 736

FREE



CALL

NEW ZEALAND

0508 CAT RENT
0508 228 736

CatRentalStore.com.au